

## **ENGINEERED INSTRUCTIONS**

**Staple-down, Glue-down, or Edge-glue and float**

### **OWNER/INSTALLER RESPONSIBILITY:**

The veneer either bamboo or hardwood is a product of nature, thus there will be some variations in grain, patterns, and shade/color from box to box. When ordering flooring 5% - 7% more flooring must be added to allow for cutting and grading allowances. For diagonal installations add 15% more for waste.

- Before installation inspect the flooring for any manufactured defects. Defects on the face of the planks can be avoided by trimming the plank, and the remainder of the plank used, this is expected to minimize waste. Any board deemed unacceptable should simply not be used. If there are concerns with the quality of the product, please stop installation and contact your local retailer.
- Before installation the installer must determine if the environment and subfloor conditions meet or exceed all applicable standards, and are within the tolerances set in these installation guidelines. The manufacturer declines any responsibility for failures caused by improper job site and subfloor conditions.
- Once the boxes are brought into the home check the box labels to verify vendor information matches.
- Save a box label which has the product information for future reference.
- It is acceptable to touch up flooring during and after installation with stain, filler, or putty
- After installation it is the homeowner's responsibility to make sure the proper indoor environment is maintained. Failure to do so can result in gapping, squeaking, buckling, or cupping.

### **APPLICATIONS**      Staple/Glue/Float

Engineered flooring is our most versatile flooring and can be applied on every level of the home. When nailing, engineered flooring is typically installed using specially designed engineered wood pneumatic flooring staplers or cleat nailers, both types can work. Ensure the use of correct sized fasteners and adaptors. Engineered Flooring can be fully-glued to wood subfloors and concrete. Follow the glue manufacturer's labeling instructions regarding correct trowel size, removal of surface sealers or contaminants and use of moisture barriers. Engineered Flooring can also be edge-glued and floated over a dense pad underlayment to meet the needs of customers, building specifiers and condominium associations desiring a quieter and warmer floor (see underlayment section) and some floors can be applied over in-floor radiant heat. Specific details are outlined in this document; installations outside these guidelines are viewed as experimental.

### **JOBSITE CONDITIONS:**

- The building should be enclosed with all doors and windows in place.
- All wet work which includes painting, drywall, tiling, concrete, and masonry should be completed with ample time to dry before flooring is delivered.
- Crawlspace, basements, and garages should be dry and well ventilated.
- Crawlspace must be a minimum 18" from the bottom of the floor joist to the ground. Crawlspace must have a minimum 6 mil thick polyethylene film covering the entire crawlspace ground. Crawlspace should have proper ventilation as determined by local building codes.
- All gutters should be in place and functioning properly. Yard grading should be sloped to run water away from home foundation.
- HVAC systems should be operational for at least two weeks prior to flooring being delivered.

### **ACCLIMATION/MOISTURE TESTING:**

- After purchase / delivery the flooring must be stored inside the home, and allowed to acclimate in the rooms, where it will be installed. Keep flooring away from direct sunlight and vents during the acclimation process.
- Remove all plastic wrapping surrounding the boxes.
- Allow the flooring to acclimate 2 to 5 days inside the room where it will be installed.
- For best results the rooms should be maintained between 60F – 80F, with a humidity range between 30% to 50%.
- Boxes should be laid flat on dry wood subfloors, and wooden supports should be used to keep boxes elevated off concrete floors.
- Use a reliable species specific moisture meter to verify the moisture of the floors veneer. Follow the moisture meters manufacturer's guidelines for this step.

### **MOISTURE TESTING PROCESS:**

**STEP 1:** *Test the flooring veneer moisture content.* Test at least 20 planks per 1000 sqft of flooring, using the meter manufacturer's recommended setting for engineered flooring. Calculate the average moisture content of all 20 readings.

**STEP 2:** *Check the wood subfloor moisture.* Set the meter to the recommended setting for that specific type of subfloor. Check with the meter manufacturer for specific settings. Test 20 different locations per 1000sqft area, and calculate the average moisture content. The wood subfloor should not exceed 12% in moisture. Skip this step if you have a concrete subfloor.

### **STEP 3:**

**WOOD SUBFLOOR:** It's recommended for installation to begin when the veneer moisture content is within 4% of the average wood subfloor moisture content. Flooring should not exceed 12% moisture content. Extend acclimation time until these conditions are met. Document and Save your moisture testing results.

**CONCRETE SUBFLOOR:** It's recommended for installation to begin when the veneer moisture content is within 5% to 9% on average.

**WOOD/CONCRETE SUBFLOOR REQUIREMENTS:****Approved Wood subfloors**

Note that joist spacing determines minimum subfloor thickness.

- Joist spacing 16" on center (OC) Plywood: Minimum of (5/8") Oriented Strand Board (OSB): Minimum (3/4", 23/32")
- Joist spacing 16" up to 19.2" (OC) Plywood: Minimum of (3/4", 23/32") Oriented Strand Board (OSB): Minimum of (3/4", 23/32")
- Joist spacing over 19.2" up to maximum 24" (OC) Plywood: Minimum of (7/8") Oriented Strand Board (OSB): Minimum of (1")
- Do not install flooring directly over floor joist without subflooring. All structural panels/underlayment must be installed sealed-side down, and provide minimum 3/4" perimeter spacing. Square-edged or non-tongue and grooved panels used as a subfloor will require a minimum 1/8" (3 mm) expansion space placed between all plywood seams. Panels must meet minimum CDX grade Exposure 1 and US Voluntary Product Standard PS1-95, PS2-04 or Canadian performance standard CAN/CSA 0325-0-92 for construction sheathing. Check panel for codes.
- Pressure-treated plywood may have elevated moisture or latent with rot resistant chemicals, not for interior use.
- Solid-board subflooring should be 3/4" x 5 1/2" (1" x 6" nominal), Group 1 dense softwoods, No. 2 Common, kiln-dried to less than 12% percent moisture content. Add min. 3/8" plywood over solid board subfloors.
- Particleboard, Luan or Masonite is approved for floating installations only and must be covered with a minimum of 3/8" CDX plywood when gluing this product to the subfloor.
  - Do not install over existing plywood subfloors that are directly installed over concrete without proper moisture protection between the plywood and the concrete.
  - Nail wood flooring perpendicular to the floor joist
  - Nailing wood flooring parallel to the floor joist is an option using a combination of plywood, OSB, Advantech or similar approved subfloors.

Floor joist (16" to 19.2 oc) The total subfloor thickness minimum must be 1-1/4"

Floor joist greater than (19.2 up to 24"oc) The total subfloor thickness minimum must be 1-7/16"

**CLEAN:** All wood and concrete subfloors must be swept clean or vacuumed to remove dust and debris. For glue down installations remove all contaminants like paint, old adhesives, sealers, and dry wall mud that could affect the adhesive bond.

**FLAT:** All wood and concrete subfloors must be flat within 1/8" over a 6' span, or 3/16" over a 10' span. All areas of the subfloor must be check prior to installation. High spots can be sanded or grinded down and low spots fill with appropriate patching compounds. Never sand and grind materials covered with lead paint, or containing asbestos. Follow local building codes for proper removal practices of asbestos and lead paints.

**DRY:** Wood subfloors should be dry. The moisture in wood subfloors should not exceed 12%. If high moisture is present stop installation until the moisture source has been corrected.

Concrete subfloors must be fully cured for at least 60 days. Concrete subfloors must be tested for moisture by conducting a Calcium Chloride test (ASTM F 1869) or Relative Humidity In-Situ Probe test (ASTM F 2170). Calcium Chloride test results cannot exceed 3lbs per 1000sqft in 24hrs. Relative Humidity In-Situ probe test should not exceed 75%. A moisture barrier is required over all concrete subfloors.

**GENERAL INFORMATION (all installations)**


- Install flooring in normal proper lighting.
- Save a box of flooring for future repairs.
- Do not install in full bathrooms or areas with steam.
- Inspect subfloor for flatness, squeaks, and moisture.
- Avoid board grouping, board sizes should be intermingled.
- Use breathable materials like paper when protecting a newly installed floor.
- Inspect flooring during installation, select out boards have milling and finish defects.
- The customer is advised to be home during the installation for consultation/direction.
- Customer and installer should discuss installation and layout to maximize satisfaction.
- It is helpful to save the item number found on the packaging box ends for future references.
- Jobsite subfloors can be dry today and wet tomorrow the use of moisture barriers is highly recommended.
- Floor should be installed from several cartons at the same time to ensure good color, shade and appearance.
- Do not install flooring under permanent or fixed cabinetry (should the cabinetry or flooring need to be removed in the future)
- An Expansion space must be left around the perimeter and at all vertical obstructions.

**HELPFUL TOOLS**

- |                                   |   |
|-----------------------------------|---|
| • Pencil                          | • Eye protection                                  |
| • Chalk line                      | • Dust Mask                                       |
| • 6' level or 10' level           | • Gloves  |
| • Miter saw                       | • Engineered Floor Stapler                        |
| • Table saw                       | • Floor fasteners                                 |
| • 60 tooth carbide tip saw blades | • Hygrometer (test home temperature and humidity) |
| • Broom                           | • Blue painters tape (2080)                       |
| • Jamb saw                        | • PVA wood glue                                   |

- Air Compressor with regulator
- Air hose
- Drill bit set
- Hammer
- Tape measure
- Moisture meter (wood)
- Calcium chloride moisture test (concrete)
- Approved adhesive remover (glue down installs)
- Cloth rags
- Nail set
- Drill
- 6d finish nails
- Jig saw
- Ear protection

## NAILDOWN OVERVIEW

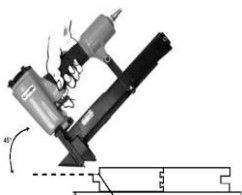

### **[NAILING TIPS]:**

- Test nailing a couple of planks in a well lit area, near a window.
- Place fasteners on tongue side that runs the length of the planks. Do not place fasteners into the groove.
- If the staples do not go in far enough raise the air pressure on the compressor up slightly and re-test until staples sit flush into the wood above the tongue.
- If the staples go in too deep lower air pressure until staples sit flush above the tongue. Some floor staplers have the ability to adjust the depth of the fastener. This may need to be adjusted for the staples to seat correctly.
- Tongue fractures can be reduced by lowering the compressor's PSI and using the recommended floor stapler.
- Dimples can be reduced by seating the floor staplers correctly on the board or using thinner gauge fasteners like 20 gauge staples. Make sure the staples are sitting flush in the wood or dimples can occur. Adjusting the depth of the stapler to seat fasteners a bit deeper can help minimize dimples.
- Only use pneumatic nail guns designed for engineered wood flooring. Norge 4 n 1 floor stapler, Stanley Bostich, Powernail, and similar engineered flooring staplers are acceptable.
- Check for squeaks after nailing. Squeaks can occur due to tongue fracture, uneven subfloor, improper fasteners, or improper fastener spacing. Squeaks can be corrected or minimized by adding a PVA floating floor wood glue to the tongue and groove of the plank before nailing.
- If stapler will not shoot staples, check for air leaks, jammed staples, staple size, and compressor air pressure.
- Its best to pre-drill and hand nail the first row using a 3/32" drill bit and 6d finish nail. This will help prevent finish chipping due to pneumatic finish or brad nailers.
- If dimpling still occurs switch to a floating or glue down installation. We do not recommend the use of water base adhesives.

### **ENGINEERED WOOD RECOMMENDED FASTENER SELECTION**

1/2" – 9/16"	18 , 19, or 20 gauge engineered flooring staples	1-1/4" or 1 -1/2" long
3/8"	18 , 19, or 20 gauge engineered flooring staples	1" or 1-1/4" long
5/16"	18 , 19, or 20 gauge engineered flooring staples	1" or 1-1/4" long

*\*\*A floating or glue down installation may be the best choice for the thinner 5/16" flooring, to help prevent tongue fracture and dimpling during installation. \*\* Always test the nailer on a plank first before beginning installation.*

### **FASTENER SPACING**

Place fasteners **3"- 4"** apart (for staples) within 1- 2" from each end with at least two fasteners

**Important:** Set air compressor to 70-80 PSI. **Test and adjust** air pressure to ensure proper setting of fasteners. Make sure that the fastening machine is fully adjustable, is in good working condition, is at the appropriate angle and seats properly against the tongue of the board to prevent top edge and surface dimple damage.



**Note:** Only use flooring stapler that are fully adjustable and that engage the top profile over the tongue at the appropriate angle. Make sure that the flooring stapler is in good working condition and seats properly against the board to prevent top edge and surface dimple damage. **Any damage caused by fasteners or nailers is not covered by the warranty.**

**NAILDOWN INSTRUCTIONS**


**[CAUTION]:** Nail flooring in good lighting. After nailing 100 sq ft, stop and inspect the installed floor for any defects or damages. Stop at 20 sqft for installation under 100sqft. Make adjustments as needed. If satisfied, continue with the installation. When top nailing pre-finished flooring (the first and last rows, stair treads, and risers) it is recommended to pre-drill and hand nail using a 3/32" drill bit and 6d finish nails. Pneumatic 16ga. finish nail or 18ga. brad nail guns can be used to secure the first and last rows, but improper use can easily damage the board or finishes. When installing over crawl spaces, basements, or garages use [15 lb. black felt paper](#), [Black asphalt saturated Kraft paper](#), or [white Silicon Vapor Shield®](#) as a minimum to provide protection against moisture vapors.

**INSTALLATION PREP**


Use a manual or electric jamb saw to undercut all door jambs/casing to allow enough clearance for the wood flooring to easily slide underneath. A credit card thick gap between the top of the wood flooring and bottom of the door jamb is acceptable. Sand down high areas of the subfloor. Correct low areas (See subfloor prep). Sweep or vacuum the subfloor clean of dust and debris. Install moisture retardant underlayment, and staple it down to prevent movement/sliding. (See underlayments)

**STEP 1: THE FIRST THREE ROWS**


- Determine the starting wall, usually the longest or outside foundation wall. At the two opposite ends of this wall, measure out the width of the board including the tongue, plus the expansion space, and place a mark. An expansion gap must be left around the perimeter and at all vertical obstructions. This gap will be the same as the thickness of the new flooring. For example; 1/2" flooring requires 1/2" expansion gap.
- Snap a chalk line connecting the two marks. Align the tongue side of the first row of boards on the chalk line with the groove side towards the starting wall, maintain the expansion space.
- Install the flooring with the tongue side facing away from the starting wall (Use long straight planks for first two rows).
- Pre-drill and top nail the first row of boards using a 3/32" drill bit and 6d finishing nails about an 1" from the back edge. Pneumatic finish nail guns or brad nail guns can also be used. If hand nailing countersink the finish nail using a nail punch and fill with close matching wood filler. Blind nail the 2<sup>nd</sup> and 3<sup>rd</sup> rows using the flooring stapler, and seat the staples slightly above the tongue.

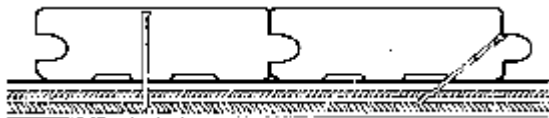**STEP 2: LOOSE LAY (Rack) THE FLOORING**

After installation of the first three rows, loose lay about 100sqft of flooring about 4" or 5" away from the last secured row. Pull from several boxes to mix board color and sizes to create a random look. Visually inspect flooring for defects while racking. Stagger boards randomly as possible, avoid creating patterns. See picture for proper layout guidance.

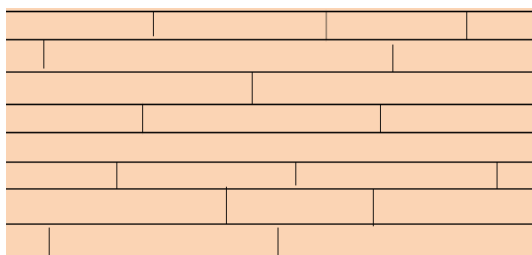

Correct Board Stagger

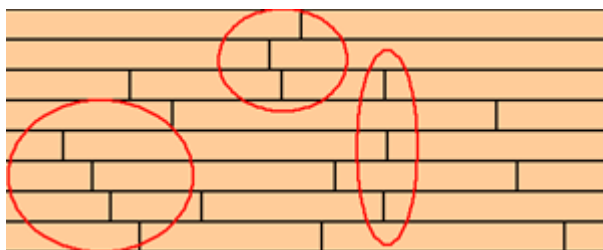

Incorrect Stagger circled in red

**STEP 3: INSTALLATION CONTINUED**

- After racking out 100sqft of flooring begin nailing the floor. (See fastener recommendations). Visually inspect boards for defects while nailing. Use proper fastener spacing (See fastener spacing). Continue nailing until you get to the last one or two rows. The last one or two rows will have to be top nailed. Again pre-drill using a 3/32" drill bit and 6d finishing nails.
- The last rows can be pulled tightly together using a floor Jack or pry bar. Protect base boards before using these tools.
- The last row may have to be ripped down in width to fit. If the last row is less than 1" in width use a PVA carpenters wood glue to join the last piece to the previous row.

**STEP 4: FINISHING UP**

- Fill in nail holes and minor gaps with close matching wood filler.
- Install any base board molding and shoe molding
- Install transition moldings
- Sweep the floor
- Clean floor with approved cleaner (contact you're flooring retailer for approved cleaner).

- Use felt pads under furniture legs. Protect floor before moving appliances and heavy furniture.

### **Glue Down Installation Method:**

When gluing down the flooring, install the flooring the same way as you would using the floating installation method. The only difference is that adhesive will be trowel applied to the subfloor, and the flooring will be laid into the adhesive bonding it to the subfloor. Always check the adhesive manufactures guidelines on proper subfloor prep, moisture testing, approved substrates, trowel sizes, cure times, and coverage. *A moisture barrier is required over all concrete subfloors.* It is strongly advised to use moisture barriers that offer 100% moisture protection over concrete.

**Recommended Adhesives:** Use Bostik, Mapei, Morning Star, and Exmore adhesives that are designed for use with engineered wood floors. Technical Data Sheets for these adhesive can be found on the adhesive manufactures website, or on Lumber Liquidators Flooring 101 section at [www.lumberliquidators.com](http://www.lumberliquidators.com) . Technical data sheets provide the guidelines for approved subfloors, approved floors, subfloor prep, cure times, and trowel sizes among other information.

**Expansion Space:** A minimum 1/2" expansion space is required around all fixed objects and walls. T-molding expansion breaks are not required with glue down installation methods, but can be helpful in minimizing overall floor movement due to seasonal humidity changes inside the home.

**Glue down Install:** Start the installation parallel to the longest exterior wall in the room. Spread out only enough adhesive to install the first row of flooring leaving a min. 1/2" expansion gap at all walls. A laser level or string line can be used to make sure the first row is straight. Allow the first row to set up before installing additional rows. This helps prevent the first row from moving as the next rows are installed. Spread out enough adhesive to install 4 rows at a time. Planks must be wet laid into the adhesive. Discard badly bowed or warped planks. Periodically lift up a plank to verify proper adhesive coverage to the subfloor and bottom of the plank. After laying 4 rows clean up any glue that gets on the finish right away using the adhesive manufactures recommended adhesive remover. Use #2080 blue painters tape to hold planks together if needed until the adhesive cures. Don't leave tape on for more than 24hrs. Wait 24hrs before placing furniture back onto the flooring. Glue down tips can be found on the Flooring 101 section of Lumber Liquidators website. [www.lumberliquidators.com](http://www.lumberliquidators.com)

**DOUBLE STICK INSTALLATION** – Flooring glued over an approved underlayment that is also glued to the subfloor  
Approved underlayments – Bellawood Premium, Bellawood Platinum, Eco Silent Sound, Insulayment, Cork  
Allow the underlayment to fully cure before gluing wood flooring to the underlayment. Not all adhesives and underlayments are compatible contact Technical dept. for application details

## **FLOATING FLOOR INSTRUCTIONS**

During installation, **Carpenters PVA Floating Floor Wood adhesive** should be applied to each groove on the short and long sides of the planks to ensure bond with the other planks. Two separate continuous beads of glue should be applied: one continuous bead applied inside the groove, and one continuous bead applied to the top part of the tongue at all seams to ensure a secure bond with the top and bottom of the tongue. This double-gluing helps to minimize squeaks, board gaps, or separation. Note that seasonal gapping is normal in wood flooring and does not constitute a product failure. Seasonal gapping can be minimized by keeping the indoor humidity above 30%.

### **Floating Installation Method:**


**Approved Underlayments:** Bellawood Platinum, Bellawood Premium, Eco Silent Sound HD, 3mm or 6mm cork, Quiet Walk, and Insulayment pads are approved for wood and concrete subfloors installations. Caution before installing over concrete a minimum 6 mil polyethylene sheeting moisture barrier **must be installed** prior to installing the underlayment pad to help protect the flooring from excessive moisture.

**Expansion Space/T-molding Breaks:** An expansion break is required to break continuous runs exceeding 40' in width and 40' in length. T-molding transitions are used to filled in the gap required for expansion breaks. A 3/4" gap is required at all walls and fix objects. Installations fewer than 30' in length or width can use a 1/2" gap at all walls and fixed objects. ***For room dimensions of greater than 40' in length or width, the flooring should be glued down using an approved adhesive.***


#### **Installation:**

- Determine the starting wall, usually the longest or outside foundation wall. At the two opposite ends of this wall, measure out the width of the board, and place a mark. (Do not include the tongue of the board when measuring). An Expansion gap or space must be left around the perimeter and at all vertical obstructions.
- Snap a chalk line connecting the two marks. Tack down fern strips or carpet tack strips along the chalk line.
- Install the first row of flooring against the tacked wood strips.
- The flooring should be installed from left to right, tongue side towards the wall, with the groove side facing out from the wall.
- Install the first row end to end until the entire row is complete. Be sure to use PVA carpenters wood glue on all plank butt ends

- When edge-gluing, ensure that the glue is still wet when the planks are joined. Special attention should be paid to ensure that there is no excess glue dripping to the subfloor as this could bond the plank to the underlayment and hamper floor movement. A lightly water dampened rag can also be used to remove any PVA glue.
- Next, install the second row of planks, installing left to right. Each plank should be installed long side first into the previous row. Make sure carpenter's PVA wood glue is applied to all tongue and groove seams. Insert a spacer at the wall, then install the long side of the plank into the previous row. Once the tongue is inserted into the groove fold the plank down onto the subfloor. The butt ends will be lightly tapped over from right to left to close the end seams. Be sure to keep a minimum stagger of 6" between end seams from row to row. Use a pry bar to close the end seam of the last plank installed in each row.

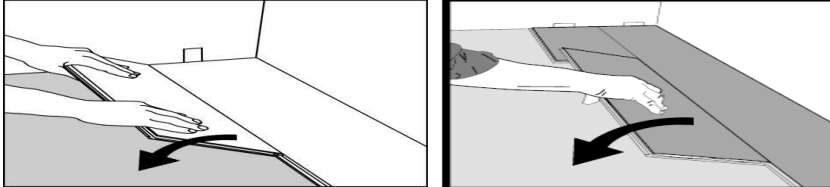

- After installing 4 or 5 rows apply #2080 blue painters tape to the plank surface perpendicular to the installed floor. This is used to hold the planks together until the glue cures. (incorrect tape can damage the finish)
- Continue installing the flooring until you reach the opposite wall in the room. The last row of flooring by the wall may need to be ripped down to fit. Make sure you have proper expansion space between the last installed row and the wall.
- Go back to the first row of flooring, remove the fern strip or tack strip and insert the final row of flooring to complete the room installation. Make sure proper expansion is left between the floor and wall.
- Remove the blue painters tape after 8 to 10hrs.
- To pass obstacles through the floor covering (pipes, radiator mounts), use a pencil to trace the center position for drilling. Use a big enough drill bit to leave a 1/2" expansion around the pipe. A jig saw may be needed for bigger rounded cuts. Next, cut the strip in two so that the saw mark goes through the center of the drilled hole, so that the strip can be glued and reassembled around the pipe.

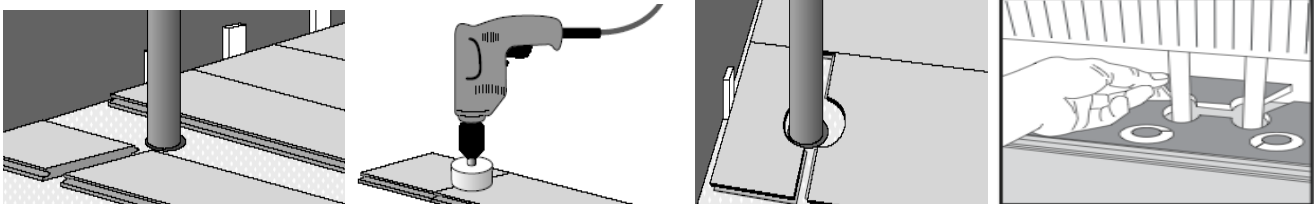

### Post-installation

- After installation, allow glue to fully cure for 24 hrs before replacing furniture and heavy foot traffic.
- Protect flooring before moving any heavy furniture or appliances. (damages from furniture and appliances are not covered)
- Fill in minor gaps with close matching wood filler
- Check for adhesive on floor finish and remove with appropriate adhesive manufacturer remover.
- For best matching of sheen or milling save a box of flooring for future repairs.
- Clean floor with Bellawood Floor Cleaner

### **Radiant Heat Systems**

For a list of radiant heat approved engineered floors, go to the Lumber Liquidators website ([www.lumberliquidators.com](http://www.lumberliquidators.com)) click the Flooring 101 link. Then type "radiant heat approved engineered floor list" in the search feature to locate the file.

- The radiant heat system must have been tested and in operation for a few weeks prior to installation.
- The radiant heating system needs to be turned off prior to installation and the floor needs to be close to room temperature 65 to 75 degrees. If the radiant heat pipes are visible or exposed in the subfloor, you must cover them with 3/8" plywood to spread heat more evenly.
- After the flooring is installed, slowly raise the temperature to the preferred comfort level (over at least a 5 day timeframe) beginning two days after installation or at the onset of colder weather conditions.
- The radiant heat system must be controlled and the surface temperature of the flooring must never be allowed to exceed 85°F.
- Proper relative humidity must be maintained within your home at all times during the year. For best results and to minimize seasonal gaps keep indoor humidity between 30% to 50% RH. If you are in an arid part of the USA or Canada, it is especially imperative that you use a humidifying system to maintain this moisture in the air.
- Forced air heating system also can dry out the air inside your house much more than you might imagine, so use of a Relative Humidity meter (Hygrometer) is recommended to ensure you know when you must use a humidifier to keep the relative humidity above 30%.

•Even when these guidelines are followed it is still possible that your flooring may experience some cracks (seasonal checking) on the plank surface and/or gapping between planks due to slight shrinkage, which are not covered by the products limited warranty.

### **MOLDINGS & TRANSITIONS:**

Install transition moldings directly to the subflooring. Pre-drill and hand nail transitions moldings to wood subfloors using 6d finishing nails, pneumatic finish nailers, or pneumatic brad nailers. Use a wood urethane tube adhesive to bond wood transitions to concrete. Cut moldings using a electric miter saw using a 60 tooth or 80 tooth fine finish carbide tipped blade makes the best cuts. Attach base or quarter round moldings to the wall, never into the floor. Mitered cuts hide better when joining moldings.

- Base Board – for hiding imperfections and adding a custom finish along any wall.
- Quarter-Round - for covering the expansion left at walls and other fixed surfaces.
- 3 & 6) Reducer Moldings - used to transition to lower floors.
- Stair Nosing - for finishing the exposed edges of stairs and landings.
- T-Expansion - for joining two areas of flooring of similar heights.
- 7) End Cap - for finishing the space at sliding glass doors, at bath tubs or transitioning to carpet.

### **Routine Care/Protection**

#### Care

- Use the Bellawood Cleaner or Dream Home cleaner to keep the floor clean. We do not endorse any other cleaners.
- Apply mineral spirits on a cloth to help remove oil, paint, markers, lipstick, ink, or tar. Then buff with dry cloth.
- Only use vacuums designed for hard surface floors.
- Do not use wet mops, steam cleaners, oils, polishes, waxes on the floor.
- Do not use buffing or polishing machines.
- Remove hardened candle wax and chewing gum with ice, then gently scrape with a plastic scraper, such as a credit card.
- Repair white scratches with stain markers. Dents and chips can be concealed with wood putty, wax crayons, or wood epoxy sticks.
- Maintain home climate between 60F and 80F with humidity between 30% to 50% year round.
- 10.UV light can cause wood and bamboo to lighten or darken overtime. Periodically rearranging your area rugs and furniture will allow the floor to antique or age evenly.

#### Protection

- Use mats at entrance doors to collect dirt, grit, and wet shoes
- Only use breathable rugs and rug pads that are safe for hardwood floors. Verify with rug manufacture. Do not use PVC, petroleum or solvent based backings.
- Use floor protectors and wide-load bearing leg bases for heavy object like fish tanks, pool tables, and pianos.
- 6. Do not walk on your floor with stiletto heels, shoes with sports cleats or exposed metal parts.
- 8. Keep pet nails trimmed to prevent scratching the floor.
- 10. Use protection when moving heavy furniture or appliances. Never try to slide or roll heavy objects across the floor.
- 11. Felt pads should be used under chair legs. Use soft rubber castors or felt castors on office chairs.



#### **CAUTION: WOOD DUST** Cut flooring outside

Sawing, sanding and machining wood products can produce dust. Airborne wood dust can cause respiratory, eye and skin irritation. The International Agency for Research on Cancer (IARC) has classified wood dust as a nasal carcinogen in humans.

Precautionary Measures: Cut flooring outside. Equip power tools with a dust collector. If high dust levels are encountered; use an appropriate NIOSH-designated dust mask. Avoid dust contact with eye and skin, USE EYE AND EAR PROTECTION. First Aid Measures in case of irritation: flush/rinse eyes or skin with water for at least 15 minutes.

TO OBTAIN ASSISTANCE WITH PRODUCT INFORMATION, PLEASE CONTACT THE STORE OF ORIGINAL PURCHASE OR CONTACT CUSTOMER CARE AT 800-366-4204. VISIT THE "FLOORING 101" or [www.lumberliquidators.com](http://www.lumberliquidators.com) FOR INSTALLATION TIPS AND ADDITIONAL WARRANTY INFORMATION.